

BLOWER-COIL CIRCUITING CROSS REFERENCE

Coil Rows	GPM	Number of Circuits					
		Size 08	Size 12	Size 16	Size 20	Size 30	Size 40
1 Row	Low	1	1	1	1	2	3
	Standard	2	2	2	2	3	5
	High	4	4	4	5	8	9
2 Row	Low	2	2	3	4	4	6
	Standard	3	3	6	7	8	12
	High	6	6	8	9	16	18
3 Row	Low	2	2	3	4	4	6
	Standard	3	4	6	7	8	11
	High	6	6	9	14	12	18
4 Row	Low	3	3	4	4	6	9
	Standard	4	6	8	9	11	18
	High	8	12	12	14	16	24
6 Row	Low	3	4	4	6	8	9
	Standard	6	6	9	10	16	18
	High	9	9	12	14	24	27