
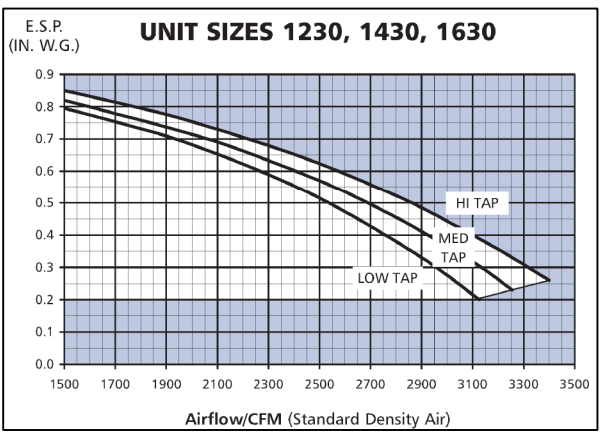
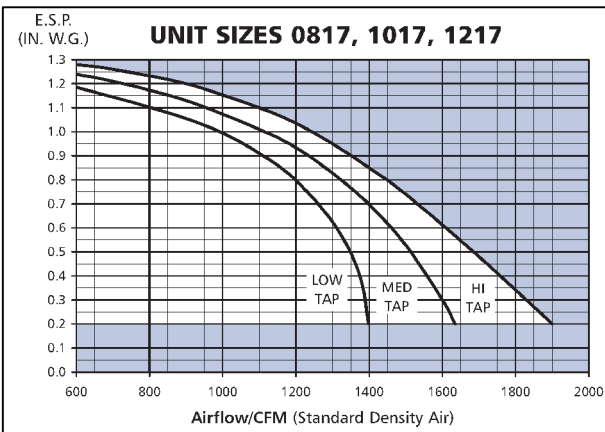
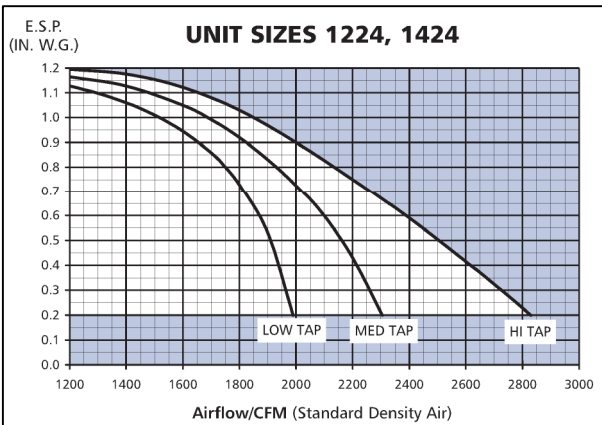
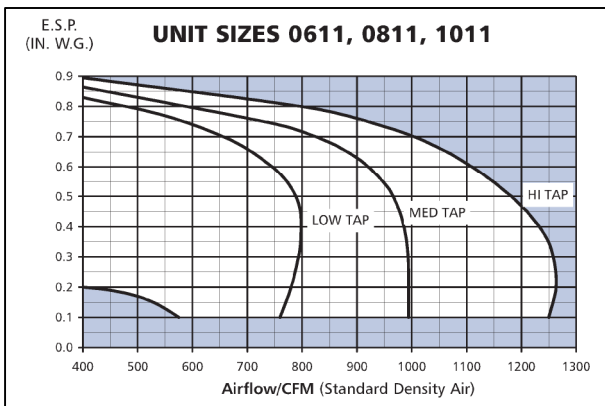
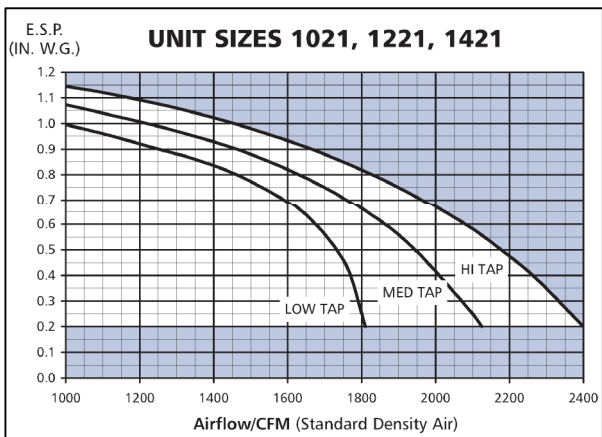
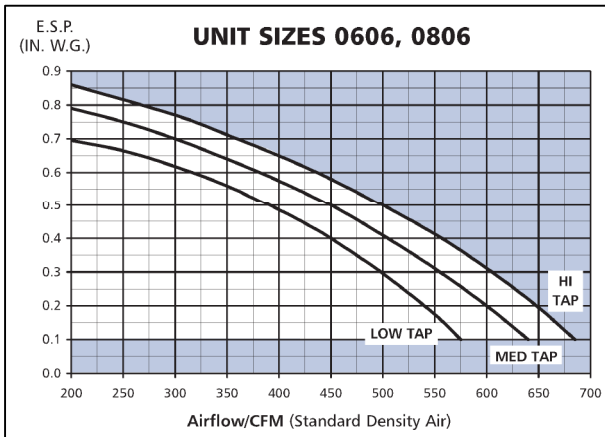


Each fan curve depicts the actual performance for the relative motor tap without any additional fan balance adjustment. Actual specified capacities which fall below a particular fan curve (LOW, MED, or HI) can be obtained by adjustment of the electronic fan speed controller. Selections should only be made in the non-shaded areas. The minimum external static pressure requirement is shown for each fan assembly. The unit fan should not be energized prior to realizing this minimum external static pressure.

Unit is supplied with a 3 position quick select terminal strip and jumper wire connected to low motor tap. Fan selections above the low fan curve shown above can be achieved during field air balance by moving the jumper wire to the medium or high position.

Terminals equipped with a hot water heating coil require the addition of the coil pressure drop to the specified external static pressure before making the fan selection.

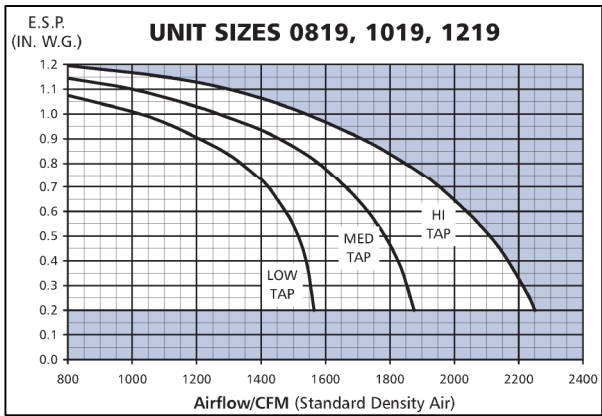

TITLE:

MODEL CFRQ
FAN PERFORMANCE DATA



DRN BY: SHELLY	DATE: 09/19/97	SCALE: N/A	DRAWING NO.
CKD BY: RW	DATE: 07/31/15	REV: 01	

THIS DRAWING CONTAINS PROPRIETARY DATA.
UNAUTHORIZED DISCLOSURE, REPRODUCTION, OR USE
IS STRICTLY PROHIBITED WITHOUT WRITTEN PERMISSION

DO NOT SCALE DRAWING
DIMENSIONS AND DATA ARE SUBJECT TO CHANGE WITHOUT NOTICE.
CONTACT FACTORY FOR CERTIFIED DRAWINGS.

19610