


# HOW TO SPECIFY

RRV

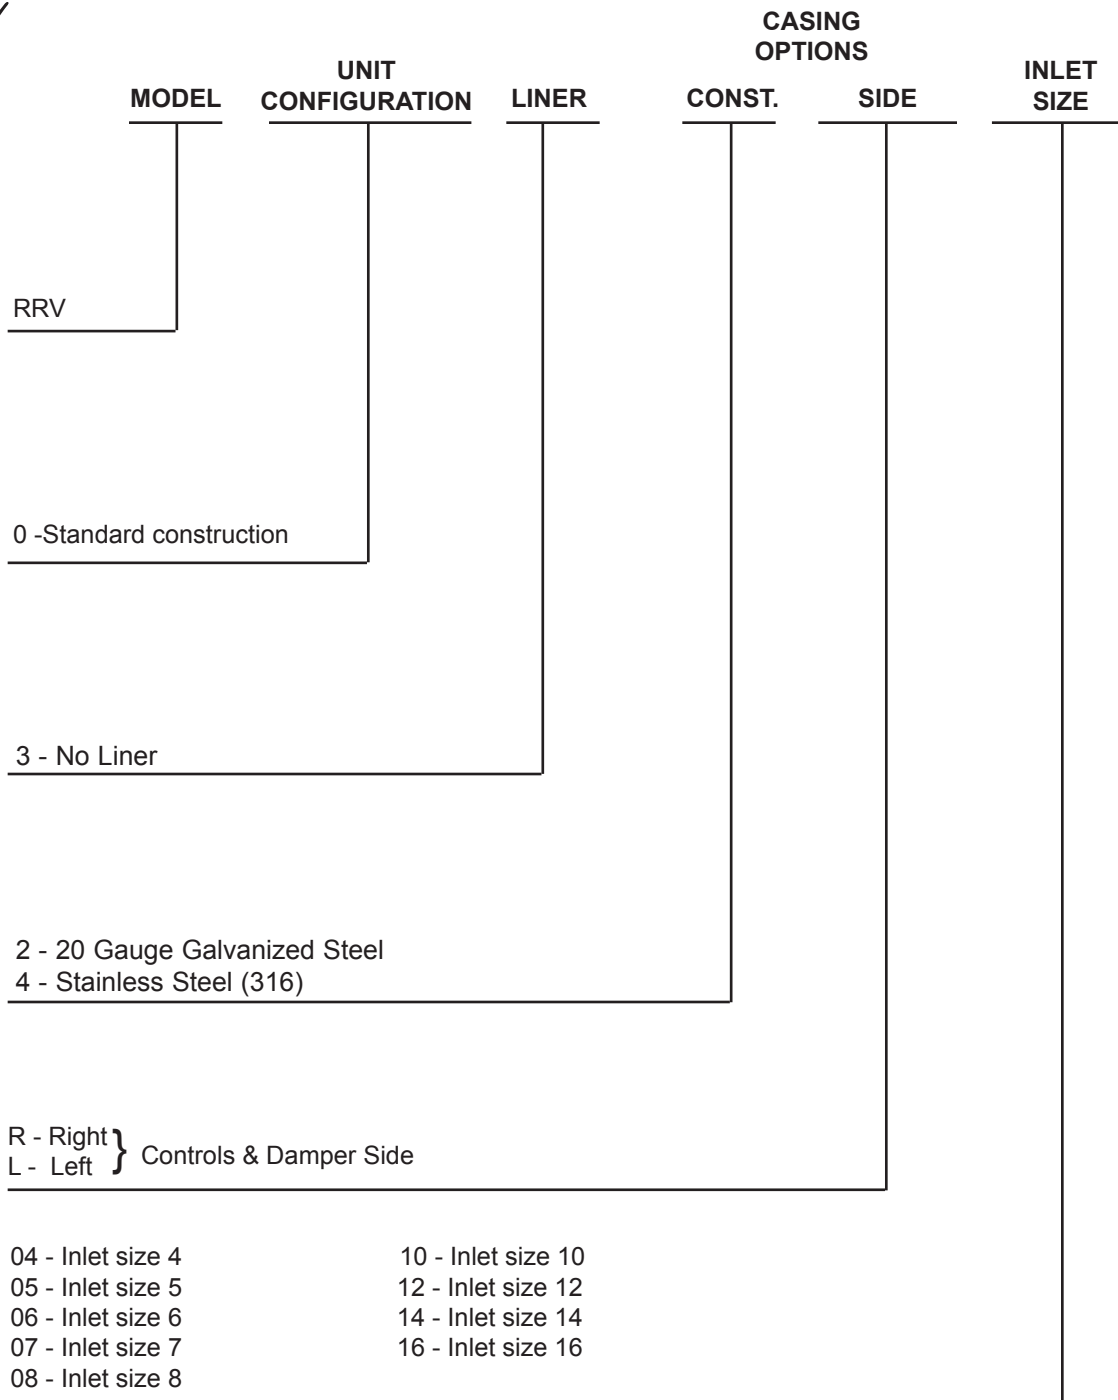

# HOW TO SPECIFY

RRV

DISCHARGE OPTIONS	CONTROL TYPE	UNIT ACCESSORIES
<p>B - Bellmouth/Slip D - Bellmouth/Flange F - Flange/Flange S - Slip/Slip</p>	<p>No Controls/No Control Enclosure - 0000 Analog - 2200 Pneumatic - 1200 - 1205 Digital - Contact Application Engineer For Field Mounted Controls: Analog/FMA-DFMT (includes enclosure)</p>	<p>0-None D-Controls Disconnect Switch (toggle) E-Dust-Tight Sealing for control enclosure G-24V / 24V Transformer H-120V / 24V Transformer J-208V / 24V Transformer K-240V / 24V Transformer L-277V / 24V Transformer</p>

