


HOW TO SPECIFY

BPS Units

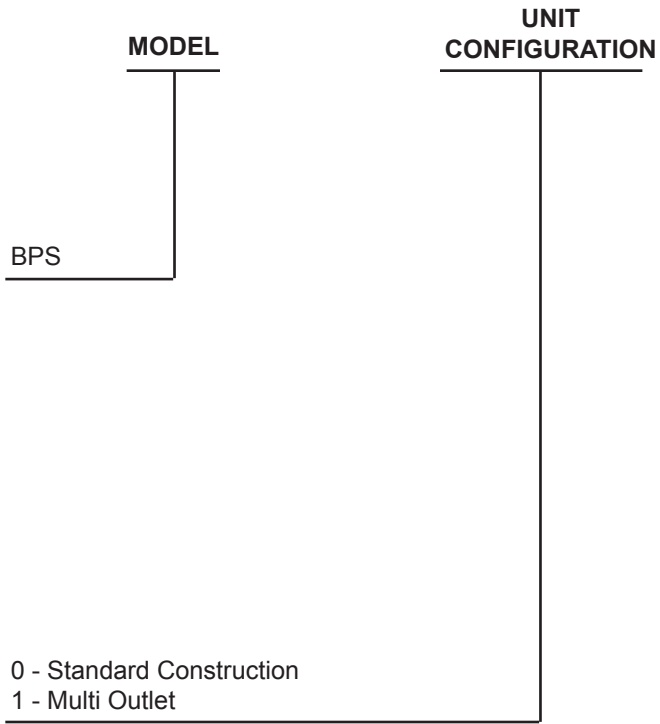

HOW TO SPECIFY

BPS Units

INLET SIZE	CONTROL TYPE	UNIT ACCESSORIES
06 - Inlet size 6 08 - Inlet size 8 10 - Inlet Size 10 12 - Inlet Size 12 14 - Inlet Size 14 16 - Inlet Size 16 18 - Inlet Size 18	No Controls/No Control Enclosure - 0000 Pneumatic - 1600 - 1603 Electric - 3500	0 - None C - Manual Inlet Damper D - Multi-outlet Damper E - Manual Bypass Damper F - Manual Outlet Damper G - 24V/24V Transformer H - 120V/24V Transformer J - 208V/24V Transformer K - 240V/24V Transformer L - 277V/24V Transformer S - Hanger Brackets

