

TC3222

Defrost Controller Installation Guide


Controller for refrigerated cabinets, counters and islands, with energy-saving strategies



- EENGLISH
- Controller for normal and low temperature unit
 - Power supply for TC3222N5x: 115 VAC
 - Power supply for TC3222N7x: 230 VAC
 - Cabinet probe and auxiliary probe with a negative temperature coefficient (NTC), 10,000 ohm at 77°F
 - Door switch or multi-purpose input
 - Alarm buzzer
 - TTL MODBUS® subordinate port for Building Management System (BMS)
 - Cooling or heating operation

1MEASUREMENTS AND INSTALLATION


Measurements in mm (inches). Fit the controller to a panel with the snap-in brackets supplied.

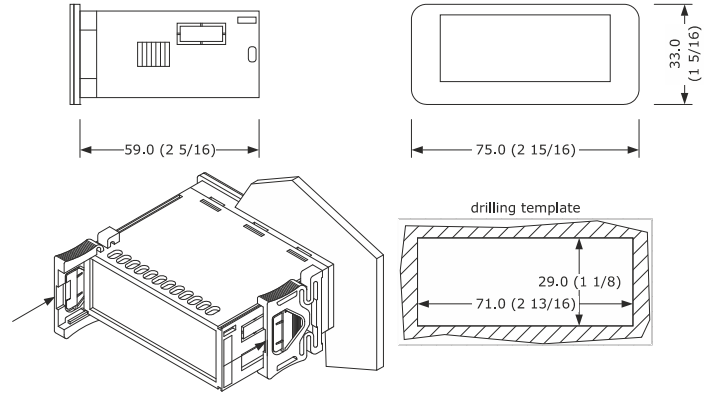

- INSTALLATION PRECAUTIONS
- Ensure that the thickness of the panel is between 0.8 mm and 2.0 mm (1/32 in. and 1/16 in.)
 - Ensure that the working conditions are within the limits stated in the *TECHNICAL SPECIFICATIONS* section.
 - Do not install the device close to heat sources, equipment with a strong magnetic field, in places subject to direct sunlight, rain, damp, excessive dust, mechanical vibrations or shocks.
 - In compliance with safety regulations, install the device correctly to ensure adequate protection from contact with electrical parts. Fix all protective parts in such a way so as to need the aid of a tool to remove them.

2ELECTRICAL CONNECTION

-
- Important**
 - Use cables of an adequate wire gauge for the current running through them.
 - To reduce any electromagnetic interference, connect the power cables as far away as possible from the signal cables.

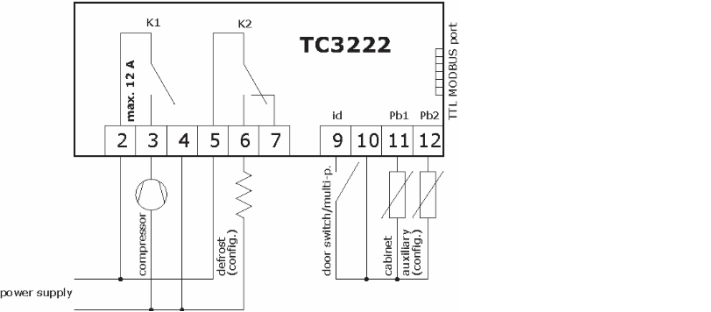

- Power supply for TC3222N5x: 115 VAC.
- Power supply for TC3222N7x: 230 VAC.

- PRECAUTIONS FOR ELECTRICAL CONNECTION
- If you use an electrical or pneumatic screwdriver, adjust the torque to a maximum of 0.5 N•m (4 in. lb).
 - If you move the device from a cold to a warm place, the humidity may cause condensation to form inside. Wait an hour before you switch on the power.
 - Make sure that the supply voltage, electrical frequency, and power are within the set limits. See *TECHNICAL SPECIFICATIONS*.
 - Disconnect the power supply before you do any type of maintenance.
 - Do not use the device as safety device.
 - For repairs and further information, contact the Penn sales network.


3FIRST-TIME

- Follow the instructions in *MEASUREMENTS AND INSTALLATION* to install the controller.
- Power up the device as shown in *ELECTRICAL CONNECTION* and an internal test runs. The test normally takes a few seconds. When it finishes the display switches off.
- Configure the device as shown in Table 6.1 in *SETTINGS*.
For recommended configuration parameters for first-time use, see the following table.

PAR.	DEF.	PARAMETER	MIN. - MAX.
SP	32	Setpoint	r1 to r2
P2	1	Temperature unit of measurement	0 = °C 1 = °F
d1	0	Defrost type	0 = Electric 1 = Hot gas 2 = Compressor stopped

- Check that the remaining settings are appropriate; see *CONFIGURATION PARAMETERS*.
- Disconnect the device from the mains.
 - Make the electrical connection as shown in *ELECTRICAL CONNECTION* without powering up the device.
 - Power up the device.

4USER INTERFACE AND MAIN FUNCTIONS

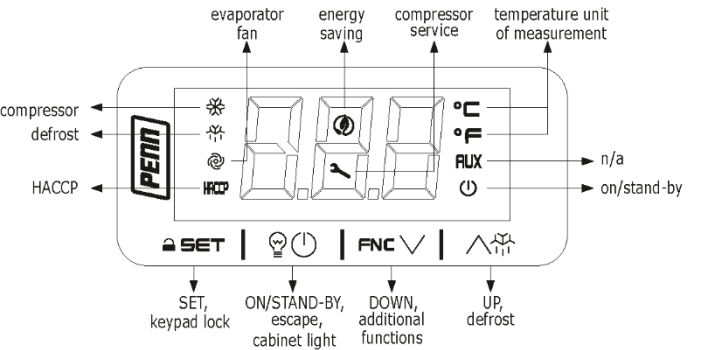

- 4.1Switching the device on or off
- If POF = 1, tap the ON/STAND-BY key for 4 s.

If the device is switched on, the display shows the P5 value, cabinet temperature by default. If the display shows an alarm code, see *ALARMS*.

LED	ON	OFF	FLASHING
	Compressor on	Compressor off	- Compressor protection active - Setpoint setting active
	Defrost or pre-dripping active	-	- Defrost delay active - Dripping active
	Evaporator fan on	Evaporator fan off	Evaporator fan stop active
HACCP	Saved Hazard Analysis and Critical Control Point (HACCP) alarm	-	New HACCP alarm saved
	Energy saving active	-	-
	Request for compressor service	-	- Settings active - Access to additional functions active
°C/°F	View temperature	-	Overcooling or overheating active
	Device off	Device on	Device on or off active

If 30 s elapse and you do not press the keys, the display shows the “**Loc**” label and the keypad locks automatically.

- 4.2Unlocking the keypad
- Tap any key for 1 s. The display shows the label “**UnL**”.

- 4.3Setting the setpoint
- Check that the keypad is not locked.
- Tap the SET key.
 - Tap the UP or DOWN key within 15 s to set the value within the limits r1 and r2.
 - Tap the SET key or do not operate for 15 s.

- 4.4Activating manual defrost (if r5 = 0, default)
- Check that the keypad is not locked and that overcooling is not active.

- Tap the UP key for 2 s.

If P4 = 1 (default), the defrost activates if the evaporator temperature is lower than the d2 threshold.

- 4.5Turning the cabinet light on or off (if u0 = 3)
- Tap the ON/STAND-BY key.

- 4.6Silencing the buzzer (if A13 = 1)
- Tap any key.
If u0 = 2 and u4 = 1, the alarm output switches off.

5ADDITIONAL FUNCTIONS

- 5.1Activating or deactivating the overcooling, overheating, and manual energy saving
- Check that the keypad is not locked.

- Tap the DOWN key.

FUNCTION	CONDITION	CONSEQUENCE
Overcooling	r5 = 0, r8 = 1 and defrost not active	The setpoint becomes “setpoint - r6”, for the r7 duration
Overheating	r5 and r8 = 1	The setpoint becomes “setpoint + r6”, for the r7 duration
Energy saving	r5 = 0 and r8 = 2	The setpoint becomes “setpoint + r4”, at maximum for the HE2 duration

- 5.2Navigating the additional functions menu
- Before you begin, check that the keypad is not locked.

- To access the additional functions menu, tap the DOWN key for 4 s.
- To navigate to a label, tap the UP or DOWN key within 15 s.
- To select a label, tap the SET key.
- If you cannot edit the parameter, the value displays. If you can edit the parameter, tap the UP or DOWN key to navigate to the value that you want.
- To set the parameter value, tap the SET key.
- To exit the procedure, tap the ON/STAND-BY key, or do not operate the controller for 60 s.

- 5.3Additional functions menu
- Use the additional functions menu to cycle through the labels in the following table.

LABEL	VALUE	DESCRIPTION
LS		View HACCP alarm information
	AL	Low temperature alarm information
	AH	High temperature alarm information
	id	Door switch alarm information
	PF	Power failure alarm information, available when you connect to a TCIF23TSX accessory
rLS		Delete HACCP alarm information
	149	Command to delete HACCP alarm information
CH		View compressor functioning hours in hundreds
rCH		Delete compressor functioning hours
	149	Command to delete compressor functioning hours
nS1		View compressor start-up number in thousands
Pb1		Cabinet temperature
Pb2		Auxiliary temperature
PrJ		View the project number
rEU		View the firmware revision

- 5.4Alarm information example
- The following table shows an example of information for a high temperature alarm.

LABEL	SAMPLE VALUE	DESCRIPTION
	8.0	The critical value was 8.0°F or 8.0°C. The critical value can be cabinet temperature or calculated product temperature (CPT). The time at which the alarm signaled, for example: 26 March 2015 at 16:30 Sta is available when you connect a TCIF23TSX accessory.
	y15	2015
	n03	March
	d26	26 March 2015
	h16	16:xx
	n30	16:30
dur		The alarm duration, for example 1 h 15 min
	h01	1 h
	n15	1 h 15 min

6SETTINGS

- 6.1Setting configuration parameters
- Tap the SET key for 4 s. The display shows the label “**PA**”.
 - Tap the SET key. The display shows the label “**PAS**”.
 - Tap the UP or DOWN key within 15 s to set the password.
 - Tap the SET key or do not operate for 15 s. The display shows the label “**SP**”.
 - Tap the UP or DOWN key to select a parameter.
 - Tap the SET key.
 - Tap the UP or DOWN key within 15 s to set the value.
 - Tap the SET key or do not operate for 15 s.
 - Tap the SET key for 4 s or do not operate for 60 s to exit the procedure.

- 6.2Setting the date, time, and day of the week
- Note:** This feature is available if you connect a TCIF23TSX accessory

- Important**
Do not disconnect the device from the mains within 2 minutes of setting the time and day of the week.

Check that the keypad is not locked.

- Tap the DOWN key for 4 s.
- Tap the UP or DOWN key within 15 s to select the label “**rtc**”.
- Tap the SET key. The display shows the label “**yy**” followed by the last two figures of the year.
- Tap the UP or DOWN key within 15 s to set the year.

LAB.	DESCRIPTION
n	Month (01 to 12)
d	Day (01 to 31)
h	Time (00 to 23)
n	Minute (00 to 59)

- Tap the SET key. The display shows the label for the day of the week.
- Tap the UP or DOWN key within 15 s to set the day of the week.

LAB.	DESCRIPTION
Mon	Monday
tuE	Tuesday
UEd	Wednesday
thu	Thursday
Fri	Friday
Sat	Saturday
Sun	Sunday

- Tap the SET key. The device exits the procedure.
- Tap the ON/STAND-BY key to exit the procedure beforehand.

- 6.3Restoring the default factory settings and storing customized settings as default

- Important**
 - Check that the factory settings are appropriate; see *CONFIGURATION PARAMETERS*.
 - When you store customized settings, you overwrite the default.

- Tap the SET key for 4 s. The display shows the label “**PA**”.
- Tap the SET key.
- Tap the UP or DOWN key within 15 s to set the value.

VAL.	DESCRIPTION
149	Restores the default factory settings
161	Stores customized settings as default

- Tap the SET key or do not operate for 15 s. The display shows the label “**dEF**” when you set the value “**149**” or the label “**MAP**” when you set the value “**161**”.
- Tap the SET key.
- Tap the UP or DOWN key within 15 s to set “**4**”.
- Tap the SET key or do not operate for 15 s. The display shows “- - -” flashing for 4 s, then the device exits the procedure.
- Interrupt the power supply to the device.
- Tap the SET key 2 s before step 6. to exit the procedure beforehand.

7CONFIGURATION PARAMETERS

PAR.	DEF.	SETPOINT	MIN. - MAX.
SP	32	Setpoint	r1 to r2
PAR.	DEF.	ANALOG INPUTS	MIN. - MAX.
CA1	0	Cabinet probe offset	-25°F/°C to 25°F/°C
CA2	0	Auxiliary probe offset	-25°F/°C to 25°F/°C
P0	1	Probe type	0 = n/a 1 = NTC
P1	1	Enable °C decimal point	0 = no 1 = yes
P2	1	Temperature unit of measurement	0 = °C 1 = °F
P4	1	Auxiliary probe function	0 = Disabled 1 = Evaporator probe (defrost + fan) 2 = Evaporator probe (fan) 3 = Condenser probe
P5	0	Value displayed	0 = Cabinet temperature 1 = Setpoint 2 = Auxiliary temperature
P8	5	Display refresh time	0 s to 250 s : 10
PAR.	DEF.	CONTROL	MIN. - MAX.
r0	4	Setpoint differential	1°F/°C to 15°F/°C
r1	-50	Minimum setpoint	-99°F/°C to r2
r2	100	Maximum setpoint	r1 to 199°F/°C
r4	0	Setpoint offset in energy saving	0°F/°C to 99°F/°C
r5	0	Cooling or heating operation	0 = Cooling 1 = Heating
r6	0	Setpoint offset in overcooling/overheating	0°F/°C to 99°F/°C
r7	30	Overcooling/overheating duration	0 min to 240 min
r8	0	DOWN key additional function	0 = Disabled

			1 = Overcooling or overheating 2 = Energy saving
r12	0	Position of the r0 differential setpoint	0 = Asymmetric around setpoint 1 = Setpoint + r0 differential
PAR.	DEF.	COMPRESSOR	MIN. - MAX.
C0	0	Compressor on delay after power-on	0 min to 240 min
C2	3	Compressor off minimum time	0 min to 240 min
C3	0	Compressor on minimum time	0 s to 240 s
C4	10	Compressor off time during cabinet probe alarm	0 min to 240 min
C5	10	Compressor on time during cabinet probe alarm	0 min to 240 min
C6	176	Threshold for high condenser temperature warning	0°F/°C to 199°F/°C Differential = 4°F/2°C
C7	194	Threshold for high condenser temperature alarm	0°F/°C to 199°F/°C
C8	1	High condenser temperature alarm delay	0 min to 15 min
C10	0	Compressor hours for service	0 h to 999 h x 100 0 = Disabled
PAR.	DEF.	DEFROST (if r5 = 0)	MIN. - MAX.
d0	8	Automatic defrost interval	0 h to 99 h 0 = Only manual If d8 = 3, maximum interval
d1	0	Defrost type	0 = Electric 1 = Hot gas 2 = Compressor stopped
d2	46	Threshold for defrost end	-99°F/°C to 99°F/°C
d3	30	Defrost duration	0 min to 99 min If P3 = 1, maximum duration
d4	0	Enable defrost at power-on	0 = No 1 = Yes
d5	0	Defrost delay after power-on	0 min to 99 min
d6	2	Value displayed during defrost	0 = Cabinet temperature 1 = Display locked 2 = dEF label
d7	2	Dripping time	0 min to 15 min
d8	0	Defrost interval counting mode	0 = Device on hours 1 = Compressor on hours 2 = Hours evaporator temperature < d9 3 = Adaptive 4 = Real time
d9	32	Evaporation threshold for automatic defrost interval counting	-99°F/°C to 99°F/°C
d11	0	Enable defrost timeout alarm	0 = No 1 = Yes
d15	0	Compressor on consecutive time for hot gas defrost	0 min to 99 min
d16	0	Pre-dripping time for hot gas defrost	0 min to 99 min
d18	40	Adaptive defrost interval	0 min to 999 min If compressor on and evaporator temperature < d22 0 = Only manual
d19	6	Threshold for adaptive defrost, relative to optimal evaporation temperature	0°F/°C to 40°F/°C Optimal evaporation temperature - d19
d20	180	Compressor on consecutive time for defrost	0 min to 999 min 0 = Disabled
d21	200	Compressor on consecutive time for defrost after power-on and overcooling	0 min to 500 min If (cabinet temperature - setpoint) > 20 °F/10°C 0 = Disabled
d22	-4	Evaporation threshold for adaptive defrost interval counting, relative to optimal evaporation temperature	-10°F/°C to 10°F/°C Optimal evaporation temperature + d22
PAR.	DEF.	ALARMS	MIN. - MAX.
AA	0	Select sensor for high and low temperature alarms	0 = Cabinet temperature 1 = Auxiliary temperature
A1	-20	Threshold for low temperature alarm	-99°F/°C to 99°F/°C
A2	1	Low temperature alarm type	0 = Disabled 1 = Relative to setpoint 2 = Absolute
A4	20	Threshold for high temperature alarm	-99°F/°C to 99°F/°C
A5	1	High temperature alarm type	0 = Disabled 1 = Relative to setpoint 2 = Absolute
A6	12	High temperature alarm delay after power-on	0 min to 99 min x 10
A7	15	High and low temperature alarms delay	0 min to 240 min
A8	15	High temperature alarm delay after defrost	0 min to 240 min
A9	15	High temperature alarm delay after door closing	0 min to 240 min
A10	10	Power failure duration for alarm recording	0 min to 240 min
A11	4	High and low temperature alarms reset differential	1°F/°C to 15°F/°C
A12	2	Power failure alarm notification type	0 = HACCP LED 1 = HACCP LED + PF label + buzzer 2 = HACCP LED + PF label + buzzer (if duration > A10)
A13	0	Enable alarm buzzer	0 = No 1 = Yes
PAR.	DEF.	FANS	MIN. - MAX.
F0	3	Evaporator fan mode during normal operation	0 = Off 1 = On 2 = According to F15 and F16 if compressor off, on if compressor on 3 = Thermoregulated (with F1) 4 = Thermoregulated (with F1) if compressor on
F1	30	Threshold for evaporator fan operation	-99°F/°C to 99°F/°C Differential = 2°F/1°C
F2	0	Evaporator fan mode during defrost and dripping	0 = Off 1 = On 2 = According to F0
F3	2	Evaporator fan off maximum time	0 min to 15 min
F4	0	Evaporator fan off time during energy saving	0 s to 240 s x 10
F5	10	Evaporator fan on time during energy saving	0 s to 240 s x 10
F7	9	Threshold for evaporator fan on after dripping (relative to setpoint)	-99°F/°C to 99°F/°C Setpoint + F7

F9	0	Evaporator fan off delay after compressor off	0 s to 240 s If F0 = 2
F15	0	Evaporator fan off time with compressor off	0 s to 240 s If F0 = 2
F16	1	Evaporator fan on time with compressor off	0 s to 240 s If F0 = 2
PAR.	DEF.	DIGITAL INPUTS	MIN. - MAX.
i0	5	Door switch or multi-purpose input function	0 = Disabled 1 = Compressor + evaporator fan off 2 = Evaporator fan off 3 = Cabinet light on 4 = Compressor + evaporator fan off, cabinet light on 5 = Evaporator fan off + cabinet light on 6 = n/a 7 = Energy saving 8 = iA alarm 9 = Device on or off 10= Cth alarm 11= th alarm
i1	0	Door switch or multi-purpose input activation	0 = With contact closed 1 = With contact open
i2	30	Open door alarm delay	-1 min to 120 min -1 = Disabled
i3	15	Regulation inhibition maximum time with door open	-1 min to 120 min -1 = Until the closing
i7	0	Multi-purpose input alarm delay	-1 min to 120 min -1 = Disabled If i0 = 10 or 11, compressor on delay after alarm reset
i10	0	Door closed consecutive time for energy saving	0 min to 999 min After regulation temperature < SP 0 = Disabled
i13	180	Number of door openings for defrost	0 to 240 0 = Disabled
i14	32	Door open consecutive time for defrost	0 min to 240 min 0 = Disabled
PAR.	DEF.	DIGITAL OUTPUTS	MIN. - MAX.
u0	0	K2 relay function	0 = Defrost 1 = Evaporator fan 2 = Alarm output 3 = Cabinet light
u2	0	Enable cabinet light in stand-by	0 = No 1 = Yes Manual
u4	0	Enable alarm output off silencing the buzzer	0 = No 1 = Yes
PAR.	DEF.	ENERGY SAVING (if r5 = 0)	MIN. - MAX.
HE2	0	Energy saving maximum duration	1 min to 999 min 0 = Until the door opening
PAR.	DEF.	REAL TIME ENERGY SAVING (if r5 = 0)	MIN. - MAX.
H01	0	Energy saving time	0 h to 23 h
H02	0	Energy saving duration	0 h to 24 h
HEd	7	Energy saving day	0 = Monday 1 = Tuesday 2 = Wednesday 3 = Thursday 4 = Friday 5 = Saturday 6 = Sunday 7 = None
PAR.	DEF.	REAL TIME DEFROST (if d8 = 4)	MIN. - MAX. (h- = disabled)
Hd1	h-	First daily defrost time	h-, 1 to 24
Hd2	h-	Second daily defrost time	h-, 1 to 24
Hd3	h-	Third daily defrost time	h-, 1 to 24
Hd4	h-	Fourth daily defrost time	h-, 1 to 24
Hd5	h-	Fifth daily defrost time	h-, 1 to 24
Hd6	h-	Sixth daily defrost time	h-, 1 to 24
PAR.	DEF.	SAFETIES	MIN. - MAX.
POF	1	Enable ON/STAND-BY key	0 = No 1 = Yes
PAS	0	Password	-99 to 999 0 = Disabled
PAR.	DEF.	REAL TIME CLOCK	MIN. - MAX.
Hr0	0	Enable clock	0 = no 1 = yes
PAR.	DEF.	MODBUS	MIN. - MAX.
LA	247	MODBUS address	1 to 247
Lb	2	MODBUS baud rate	0 = 2,400 baud 1 = 4,800 baud 2 = 9,600 baud 3 = 19,200 baud Parity even

8 ALARMS			
COD.	DESCRIPTION	RESET	REMEDIES
Pr1	Cabinet probe alarm	Automatic	- Check P0 - Check probe integrity - Check electrical connection
Pr2	Auxiliary probe alarm	Automatic	
rtc	Clock alarm	Manual	
AL	Low temperature alarm	Automatic	Set date, time, and day of the week
AH	High temperature alarm	Automatic	Check AA, A1, and A2
id	Open door alarm	Automatic	Check i0 and i1
PF	Power failure alarm	Manual	- Tap any key - Check electrical connection
COH	High condenser temperature warning	Automatic	Check C6
CSd	High condenser temperature alarm	Manual	- Switch the device off and on - Check C7
iA	Multi-purpose input alarm	Automatic	Check i0 and i1
Cth	Compressor thermal switch alarm	Automatic	Check i0 and i1
th	Global thermal switch alarm	Manual	- Switch the device off and on - Check i0 and i1
dFd	Defrost timeout alarm	Manual	- Tap any key - Check d2, d3 and d11


9 ELECTRICAL RATINGS				
Output	Units	cULus (UL 60730)		CE (EN 60730)
	Applied voltage at 60 Hz	120 VAC	240 VAC	240 VAC
K1 compressor relay	Resistive amperes	12	12	12
	Inductive amperes	—	—	2
	Full load amperes	10	10	—
	Locked rotor amperes	60	60	—
K2 Defrost or evaporator fan or configurable relay	Resistive amperes	8	8	5
	Inductive amperes	—	—	2
	Full load amperes	4.4	2.9	—
	Locked rotor amperes	26.4	17.4	—

10 TECHNICAL SPECIFICATIONS			
Purpose of the control device		Function controller	
Construction of the control device		Built-in electronic device	
Container		Black, self-extinguishing	
Category of heat and fire resistance		D	
Measurements		2 15/16 in. x 1 5/16 in. x 2 5/16 in. (75 mm x 33 mm x 59 mm)	
Mounting methods for the control device		Fit the controller to a panel with the snap-in brackets supplied	
Degree of protection provided by the covering		IP65 in front	
Connection method			
Fixed screw terminal blocks for wires up to 2.5 mm²		Micro-MaTch® connector	
Maximum permitted length for connection cables			
Power supply: 32.8 ft (10 m)		Analog inputs: 32.8 ft (10 m)	
Digital inputs: 32.8 ft (10 m)		Digital outputs: 32.8 ft (10 m)	
Operating temperature		From 32°F to 131°F (from 0°C to 55°C)	
Storage temperature		From -13°F to 158°F (from -25°C to 70°C)	
Operating humidity		Relative humidity without condensate from 10% to 90%	
Pollution status of the control device		2	
Compliance			
United States	cURus Recognized; File SA516 CCN SDFY2; FCC Compliant to CFR47, Part 15, Subpart B, Class A limits		
Canada	cURus Recognized; File SA516 CCN SDFY8; Industry Canada (IC) compliant to Canadian ICES-003, Class A limits		
Europe	CE Mark – Johnson Controls declares that this product is in compliance with the essential requirements and other relevant provisions of the EMC Directive, Low Voltage Directive, and RoHS Directive		
Power supply	TC3222N5x	115 VAC (+10% -15%), 50/60 Hz (+/- 3Hz), max. 2 VA	
	TC3222N7x	230 VAC (+10% -15%), 50/60 Hz (+/- 3Hz), max. 2 VA	
Grounding methods for the control device		None	
Rated impulse-withstand voltage		4 kV	
Over-voltage category		III	
Software class and structure		A	
Analog inputs		2 for NTC probes (cabinet probe and auxiliary probe)	
NTC probes	Sensor type		B3435 (10 KΩ at 77°F, 25°C)
	Measurement field		-40°F to 221°F (-40°C to 105°C)
	Resolution		1°F (0.1°C)
Digital inputs		1 dry contact (door switch/multi-purpose)	
Dry contact	Contact type		5 VDC, 1.5 mA
	Power supply		None
	Protection		None
Digital outputs		2 electro-mechanical relays	
Type 1 or Type 2 actions		Type 1	
Additional features of Type 1 or Type 2 actions		C	
Displays		3 digits custom display with function icons	
Alarm buzzer		Incorporated	
Communication ports		1 TTL MODBUS subordinate port for BMS	

11 PRODUCT WARRANTY
This product is covered by a limited warranty, details of which can be found at www.johnsoncontrols.com/buildingswarranty
12 SOFTWARE TERMS
Use of the software that is in (or constitutes) this product, or access to the cloud, or hosted services applicable to this product, if any, is subject to applicable end-user license, open-source software information, and other terms set forth at www.johnsoncontrols.com/techterms . Your use of this product constitutes an agreement to such terms.

13 SINGLE POINT OF CONTACT		
APAC	Europe	NA/SA
JOHNSON CONTROLS C/O CONTROLS PRODUCT MANAGEMENT NO. 32 CHANGJIJANG RD NEW DISTRICT WUXI JIANGSU PROVINCE 214028 CHINA	JOHNSON CONTROLS WESTENDHOF 3 45143 ESSEN GERMANY	JOHNSON CONTROLS 507 E MICHIGAN ST MILWAUKEE WI 53202 USA

14 CONTACT INFORMATION
Contact your local branch office: www.johnsoncontrols.com/locations
Contact Johnson Controls: www.johnsoncontrols.com/contact-us

	Important The device must be disposed of according to local regulations governing the collection of electrical and electronic waste.
---	--

This document and the solutions contained therein are the intellectual property of Penn and thus protected by the Italian Intellectual Property Rights Code (CPI). Penn imposes an absolute ban on the full or partial reproduction and disclosure of the content other than with the express approval of Penn. The customer (manufacturer, installer or end-user) assumes all responsibility for the configuration of the device. Penn accepts no liability for any possible errors in this document and reserves the right to make any changes, at any time without prejudice to the essential functional and safety features of the equipment.

	Johnson Controls 507 E. Michigan St. Milwaukee, WI 53202-5211 USA www.penncontrols.com
---	---