

NOTES:

1. COLD DUCT DAMPER FAILS NORMALLY OPEN.
HOT DUCT DAMPER FAILS NORMALLY OPEN.
2. MAIN AIR SUPPLY CONSUMPTION IS 0.033 SCFM.
3. PART NUMBER DEPENDENT ON UNIT SIZE.

ITEM	PART NO	DESCRIPTION
1	10065001	KMC CONTROLLER CSC-3011
2	10058501	KMC DAMPER ACTUATOR MCP-8031
3	NOTE 3	FLO-CROSS SENSOR


JOB NAME: _____
 LOCATION: _____
 ARCHITECT: _____
 ENGINEER: _____
 CONTRACTOR: _____

SUBMITTED BY: _____

REV LEVEL: A DATE: 9/01 DWG NO: 1462

DDV/DSV DUAL DUCT VAV
 PNEUMATIC CONTROLS - Reverse Acting
 N.O. Cold, N.O. Hot
 No Mixing

CONTROL DIAGRAM

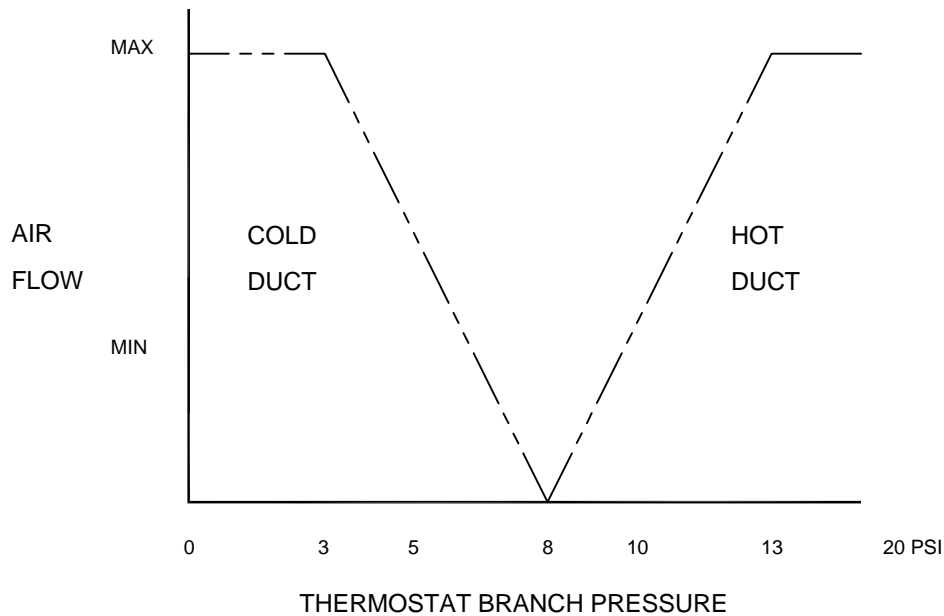

SEQUENCE OF OPERATION

1.)

Hot duct air flow is at maximum and cold duct is at zero when the thermostat branch pressure is at 13 PSIG or greater. On a rise in room temperature the thermostat branch pressure will decrease and hot duct air flow will reduce to zero at 8 PSIG. As the thermostat branch pressure continues to decrease from 8 - 3 PSIG the cold duct air flow will increase to its maximum setpoint. The reverse will occur with a drop in room temperature.

2.)

The hot duct damper fails open and the cold damper fails open with loss of pneumatic air.