

**NOTES:**

1. COLD DUCT DAMPER FAILS NORMALLY CLOSED.  
HOT DUCT DAMPER FAILS NORMALLY CLOSED.
2. MAIN AIR SUPPLY CONSUMPTION IS 0.033 SCFM.
3. PART NUMBER DEPENDENT ON UNIT SIZE.

ITEM	PART NO	DESCRIPTION
1	10065001	KMC CONTROLLER CSC-3011
2	10058501	KMC DAMPER ACTUATOR MCP-8031
3	NOTE 3	FLO-CROSS SENSOR


JOB NAME: \_\_\_\_\_  
 LOCATION: \_\_\_\_\_  
 ARCHITECT: \_\_\_\_\_  
 ENGINEER: \_\_\_\_\_  
 CONTRACTOR: \_\_\_\_\_

SUBMITTED BY: \_\_\_\_\_

REV LEVEL: A    DATE: 9/01    DWG NO: 1464

**DDV/DSV DUAL DUCT VAV**  
 PNEUMATIC CONTROLS - Reverse Acting  
 N.C. Cold, N.C. Hot  
 No Mixing

## CONTROL DIAGRAM

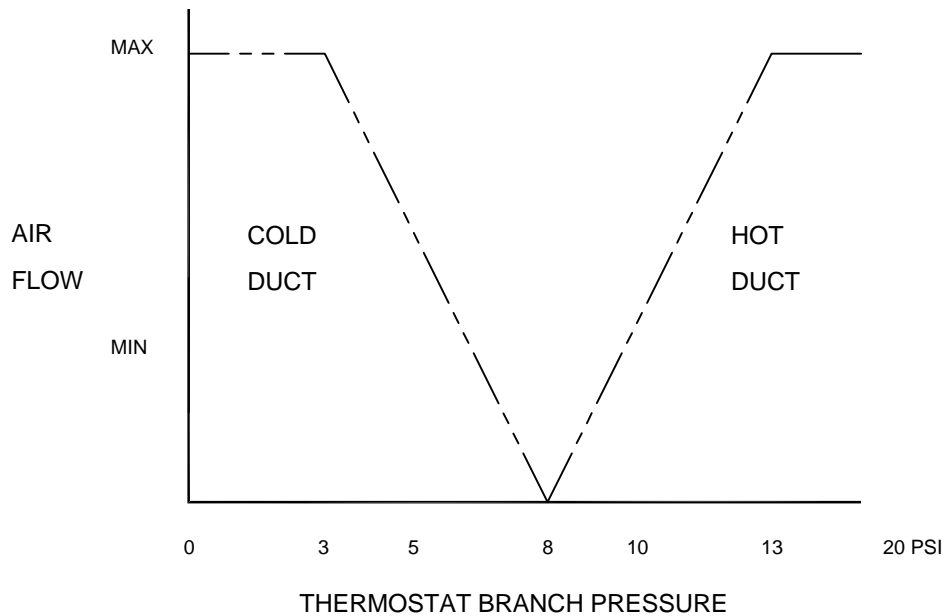

## SEQUENCE OF OPERATION

1.)

Hot duct air flow is at maximum and cold duct is at zero when the thermostat branch pressure is at 13 PSIG or greater. On a rise in room temperature the thermostat branch pressure will decrease and hot duct air flow will reduce to zero at 8 PSIG. As the thermostat branch pressure continues to decrease from 8 - 3 PSIG the cold duct air flow will increase to it's maximum setpoint. The reverse will occur with a drop in room temperature.

2.)

The hot duct damper fails closed and the cold damper fails closed with loss of pneumatic air.